


# MICROWAVE MOTION SENSOR USER'S MANUAL

Model No.: MC003V MC003V R



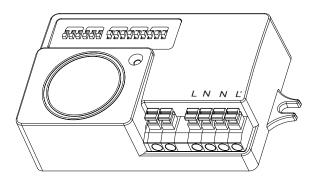

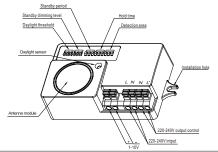

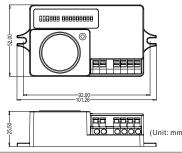

€0700


| Technical Specification | ons   |                  |
|-------------------------|---|------------------|
| Input voltage           | 220/240Vac 50Hz                                     |                  |
| Rated load              | 800W(inductive load), 1200W(resistive load)         |                  |
| Detection area          | 0.5~8m, adjustable.                                 |                  |
| Hold time               | 10s / 30s / 90s / 3min / 20min / 30min              | — <b>(€</b> 0700 |
| Daylight sensor         | 5lux / 10lux / 30lux / 50lux / Disable              |                  |
| Stand-by period         | 5s / 5min / 10min / 30min / 1h / Disable            |                  |
| Stand-by dimming level  | 10% / 20% / 30% / 40% / 50%                         |                  |
| Sensor principle        | Microwave motion detector                           |                  |
| Microwave frequency     | 5.8GHz±75MHz, ISM wave band                         |                  |
| Transmitting power      | <0.5mW (1% of transmitting power for cell phone)    |                  |
| Detection range         | Max. (Φ x h): 16m x 8m (MC003V)                     |                  |
|                         | Max. (Φ x h): 16m x 12m (MC003V R)                  | R&TTE            |
| Detection angle         | 150°(wall installation), 360°(ceiling installation) |                  |
| Motion detection        | 0.5~3m/s  |                  |
| Operating temperature   | -35°C~70°C  |                  |
| IP rating               | IP20  |                  |

#### General Guidelines for Installation



- 1, The sensor should be installed by a qualified electrician. And ensure that the electricity supply is switched off before installing or servicing the product.
- 2, The sensor should not be modified in any way. Any modifications mode to this product will immediately invalidate any warranties issued.
- 3, The company does not accept responsibility for any consequences resulting from unauthorized modification of the product.
- 4, The sensor should be connected to a stable power supply of 220/240Vac 50Hz.
- 5, Microwaves cannot pass through metal or brick walls if thicker than 20cm. They will pass through thinner walls but there will be some attenuation.
- 6, Installation inside a glass or plastic housing will result in a reduction of detection sensitivity. Expect a reduction of approximately 20% for every 3mm of thickness.

## **Installation & Wiring**

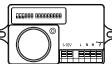

Pic 1

The sensor has 6-position terminal block as Pic 1: L(Phase) N(Neutral) L' (Switched phase / control)

1-10V (Connected to 1-10V interface)

Shenzhen Merrytek Technology Co., Ltd 4F, Building A, Wenfu Area, No. 1 Industry Park Fenghuang, Fuyong, Baoan, Shenzhen, China, 518103. www.merrytek.com sales@merrytek.com


Installation height: 1~10m (MC003V), 1~12m (MC003V R).

Suggested mounting height: wall mounting: 1~1.8m, ceiling mounting: 2.5~8m (MC003V), 2.5~12m (MC003V).

### 1, 3-step dimming (Corridor function)


The sensors supply 3 light levels: 100% low light level (10%, 20%, 30%, 40% or 50%)→off, for some areas that require a light change notice before switch off.

Connect to dimmable control gears (1-10v dimmable LED drivers or ballasts), the wiring as following:

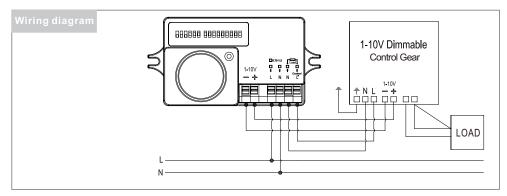

2, The motion sensors can match up with Merrytek stand-alone daylight sensor MS01 and achieve daylight harvesting, means the artificial light will be adjust the lighting system has automated controls that either turn off or dim artificial light in response to the available daylight in the space.

Note that the daylight sensor level of the motion sensor should be set to Disable mode if connect to above stand-alone daylight sensor. The wiring is as following.

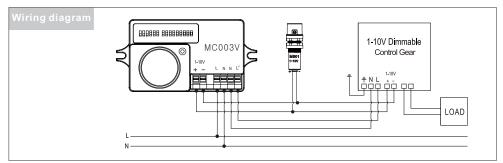

| Settings  Sensor data can be set using DIP switches on the sensor. Note that reducing the detection area will also reduce the sensitivity. |                 |  |  |
|--|-----------------|--|--|
|  |                 |  |  |
| I: up to 8m<br>II: up to 6m  | ON 1 2 3 I      |  |  |
| III: up to 4m<br>IV: up to 3m  |                 |  |  |
| V: up to 2m  | OFF V O O 0 10% |  |  |

| z, note time  |  |
|---|--|
| Refers to the time period the lamp remains at 100% illumination after no motion detected. I: 10s II: 30s III: 90s IV: 3min V: 20min VI: 30min   | ON 1 2 3 10s 11s 10s 11s O 90s 11v O 90s OFF VI O |
| 3, Stand-by period  |  |
| Refers to the time period the lamp remains at a low light level before it completely switches off in the long absence of people.  I: Disable* II: 1h III: 30min IV: 10min V: 5min VI: 5s  | ON   |
| *When set to Disable, the lamp will remain at 100% illumination if with motion detected or a pre-setting dimming level if without motion detected regardless ambient brightness threshold.  |  |
| 4,Stand-by dimming level  |  |
| This is the low light level you would like to have after the hold time in the long absence of people. I: 50% II: 40% III: 30% IV: 20% V: 10%  | ON 1 2 3   |
| 5, Daylight sensor  |  |
| The sensor can be set to only allow the lamp to illuminate below a defined ambient brightness threshold. The settings are as follows:  I: Disable* II: 50lux, twilight operation III: 30lux, twilight operation IV: 10lux, darkness operation only V: 5lux, darkness operation only  * When set to Disable mode, the sensor will switch on the lamp when motion is detected regardless of ambient light levels. Daylight sensor is active only when light totally switch off. That means, if set stand-by period on 'Disable' mode, the daylight sensor function will be not available. | ON   |

### FAQ

2 Hold time

| Question                                       | Cause  | Remedy   |
|--|--|--|
| The load will not illuminate.                  | Incorrect daylight sensor setting selected.  | Adjust setting.  |
|  | Load has failed.   | Replace load.  |
|  | Power is switched off.   | Switch on  |
| The load is permanently illuminated.           | Continuous movement in the detection area.   | Check detection area setting.  |
|  | The lamp (containing sensor) is installed in an area too close to reflective surfaces, i. e. metal, glass or concrete walls. | Make sure installation area suitable with at least 30cm space between lamp and surrounding reflective surfaces.     Reduce sensitivity (detection area). |
| The load will not illuminate despite movement. | Speed of moving object is not in the range of 0.5~3m/s or the detection radius is too small.                                 | Check detection area setting.  |