



SPECIFICATION

Product Name: LED Emergency Driver

Model No.: KE014 HE Series

Issue Date: April 22, 2025

CUSTOMER APPROVED	



Type	Model	Updating	Date
A0	KE014 HE series LED Emergency Driver new edition		2024-05-18
A1	KE014 HE series LED Emergency Driver new edition	Change wiring diagram	2024-08-16
A2	KE014 HE series LED Emergency Driver new edition	Fix Bug	2025-04-22

Specification for LED Emergency Driver KE014 HE Series C.W.








1. Features




- Constant power output LED emergency power supply with a wide output voltage range.
- Input relay switching.
- High safety, high performance, long life LifePO₄ battery.
- With battery management.
- Automatic recognition of 120&240Vac input.

2. Parameters

		2. Parameters			
Charge Part	KE014	02A180HE1	03A180HE	04A180HE	05A180HE
		02M180HE1	03M180HE1	04M180HE	05M180HE
	Rated input voltage	220-240Vac 50Hz/60Hz			
	Rated input current	0.06A Max. @230Vac			
	Input inrush current	10A(Twidth=100us 50% Ipeak)@230Vac (Cold start at full load)			
	Power factor	≥0.5@230Vac			
	Input power	<4W@230Vac			
	Battery charging current	250mA	250mA	350mA	350mA
	Battery charging time	24 hours Max.			
Emergency Part	Operating mode	Emergency mode			
	Load type	LED			
	Emergency power	2W	3W	4W	5W
	Emergency time	3hours			
	Load output current	100-30mA	130-45mA	200-65mA	250-83mA
	Load output voltage	20-60Vdc			
Battery	LifePO ₄ (The battery capacity meets the emergency time at 25℃)	6.4V 1.8Ah		6.4V 3.6Ah	
	Battery warranty	Warranty 5 year @5~60℃.			
Exception Driver Requirements	Surge current	8A			
	Input current	3A Max.			
	Output current	2A Max.			
LED Indication (Manual test)	Charging	Green light			
	Fault	Green light off			
Emergency Function Test	Manual test	Yes			
	Auto test KE014-	02A180HE1/03A180HE/04A180HE/05A180HE			

Auto Testing	Fault / test / Status	Reason	Charge Indicator Status
	Battery fully charged and operational	Standard daily use	 solid green
	Battery Charging	Initial Charge/Battery Top Up	 Flashing green 1 sec on 1 sec off
	Auto Test 3 Hours (every 12 months)	Periodic self test	 Flashing Green 3 sec on 1 sec off
	Auto Test 5 Min (every 30 days)	Periodic self test	 Flashing Green 3 sec on 3 sec off
	Duration test fault	Automatic test failed	 Flashing Red 0.5 sec on 0.5 sec off
	LED fault	Not plugged in or damaged/faulty	 Flashing Red 2 sec on – 2 sec off
	Battery Disconnected/Faulty	Not plugged in or damaged/faulty	 solid red
	Emergency protection	Battery over-charge/deep discharge protection	Yes
Output over-voltage protection		Yes	
Output overload protection		Yes	
Output short circuit protection		Yes	
Operating Environment	Operating temperature/humidity	0℃...+50℃humidity:20%-75%(without condensation)	
	Storage temperature/humidity	-5℃-35℃	
	Case Max. Temp(Tc)	75℃	
Safety & EMC	Withstand voltage	3000Vac 5mA 60s (Input “L N” – output “SEC+ SEC-)	
	Safety standard	EN61347-1, 60598-2-22, 61347-2-7, 62034	
	EMC standard	EN55015, EN61000-3-2, EN61000-3-3	
	Battery standard	UN38.3	
	Environmental protection requirements	Compliant to RoHS	
	Certification	CE	
Others	Input/output(terminal/wiring) specification	Press terminal, wire diameter: 0.5-0.75mm ²	
	IP rating	IP20	
	Type of protection	Class 2	
	Installation type	Built-in installation	
	Installation dimension	146*30*22.5mm	
	Packaging requirement	White box+Instruction manual+clapboard+outer carton(K=A)	
	Weight	75g (driver)	
	Lifespan	5 Year @Ta	
Notes:			
All parameters are tested on the input voltage 230Vac,environment temperature 25℃ ,unless otherwise specified.			

3. Dimension (Unit: mm)

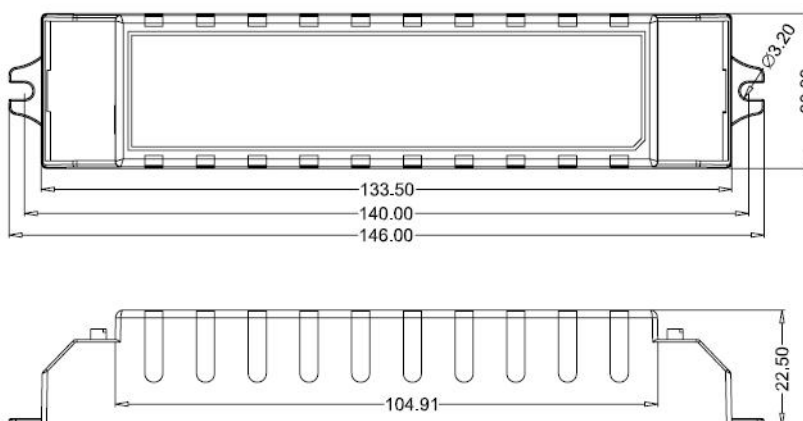

4. Battery Size (Unit: mm)

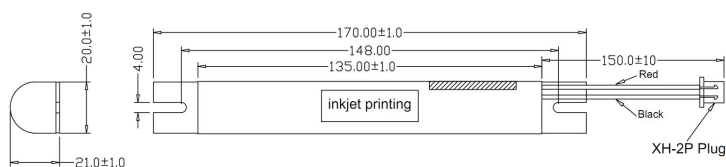


Fig.A

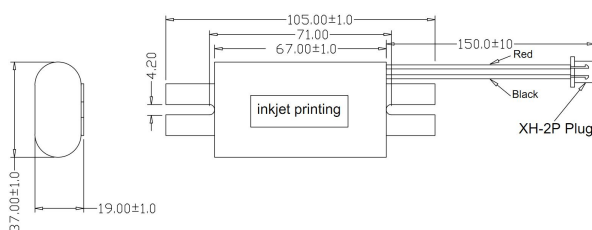


Fig.B

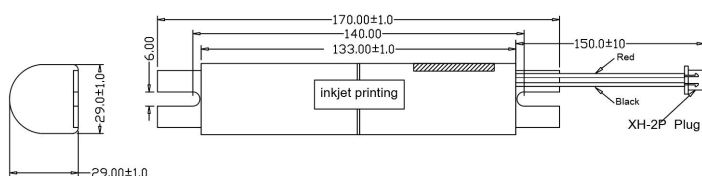


Fig.C



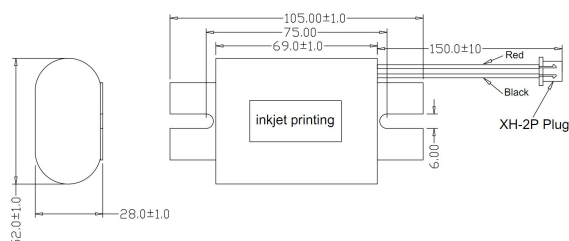


Fig.D

5. Wiring Diagram

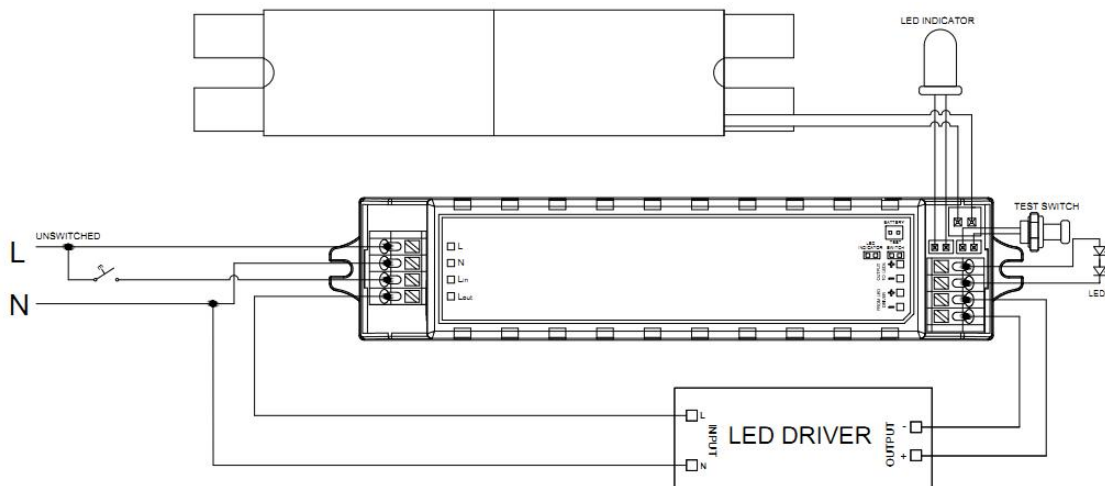

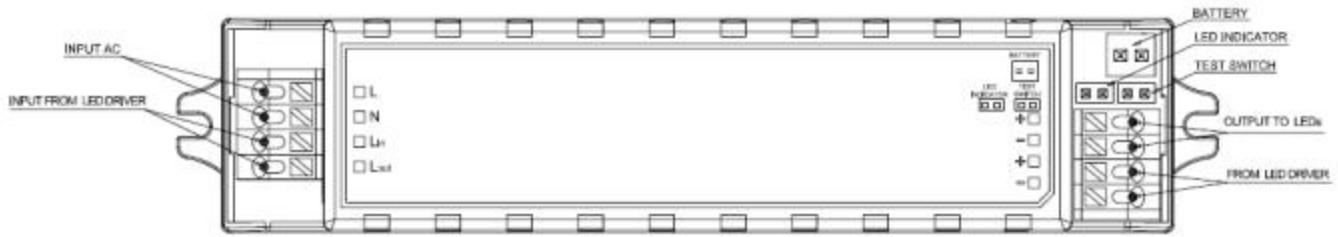

6. Wire Preparation



1).Solid or Stranded wire type: 0.5 -0.75mm²

2)To access or remove the wires from the terminals, use a screwdriver to push the buttons down

7. Manual Test & Operation Instructions

1).Connect the wire according to wiring diagram.

2).L,N power on, Switch on S1. then the load lamp turns on, The emergency driver indicator light will turns green, emergency power supply normal charging. Turn off Switch S1, the load lamp turns off.

3).Emergency Simulation: Switch on, the load lamp turns on, press the switch(TEST SWITCH), then switch to emergency mode, the indicator light of emergency driver will be extinguished. Release the switch(TEST SWITCH), then lamp is powered by led driver, the indicator light will turn on.

8. Automatic Test & Operation Instructions

1).Connect the wire according to wiring diagram.

2).AC power is off, and the clock lasts for 15 days, Power on and re-time.

3).To replace the battery, turn off the power supply, Re-time.

9. Battery Application Notice

1).The battery should be recharged and discharged semiannually in normal use conditions.

2).Do not connect to the circuit when the battery is not use to prevent over-discharge of the battery due to self-consumption of the circuit board.

3).Please keep the battery from the heat source when installing and using, and only be allowed to use in certain working temperature range.

4).The battery should be stored in a cool and dry environment.

5).After long time storage, the battery is cycled every 12 months as required.